


Pin Order

For J502, J503, J504

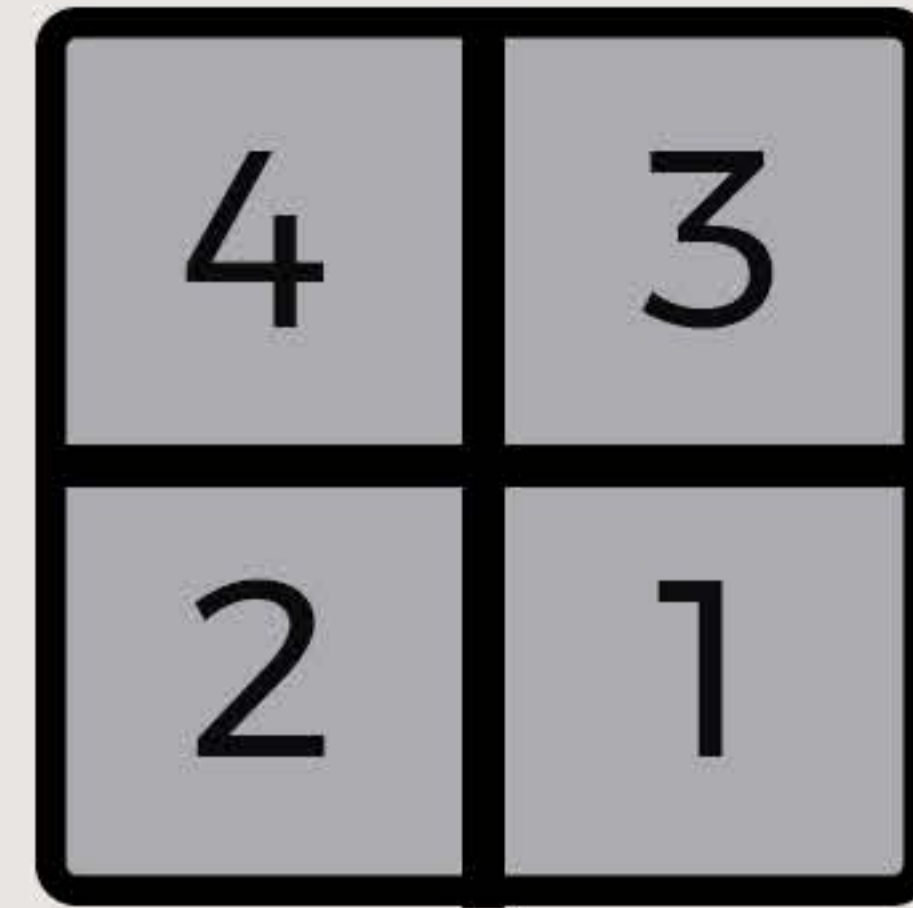

J502

- 1 GPP1
- 2 TX1
- 3 GPP2
- 4 RX1

J503

- 1 GPP4
- 2 VCC
- 3 GPP3
- 4 GND

J504

- 1 USB5V
- 2 VDD
- 3 GND
- 4 GND

J500

- 1 VCC
- 2 SWDIO
- 3 Not Connected
- 4 SWCLK
- 5 Not Connected

- 6 Not Connected
- 7 Not Connected
- 8 Not Connected
- 9 GND
- 10 Reset

For J500

